



Please READ and UNDERSTAND all installation instructions before beginning. Planning and Preparation will make the actual installation process easy and quick.

DISCONNECT ELECTRICAL POWER AT THE BATTERY BEFORE DOING ANY WIRING!

1. Determine the Location Verify there is room for the switch body behind the door jamb on each side. As well, decide which pillar you want to do your wiring through.

2. Cut Switch Holes The switches mount through a 3/4 inch hole. To verify it lines up, you could drill the door side. Then reach through the door while it's closed and mark the pillar through the hole.


3. Do the Wiring Choose one of the options below. **Note:** The switches are non-polarity sensitive, so either white wire can be connected to ground. The switch is Rated at 2 AMPS.

4. Reconnect the main power and test your wiring

OPTION "A"

INDEPENDENT LIGHT


" Provides independent Right-Left LED Strips

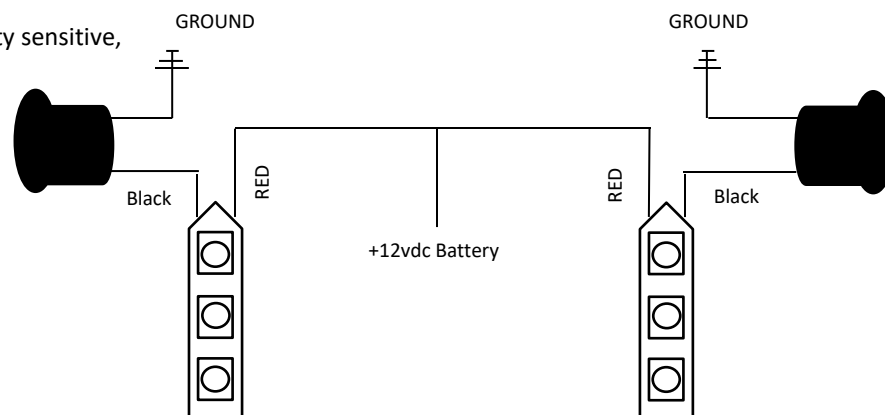

OPTION "B"

USE WITH HEADLIGHT SWITCH (GROUNDING DIMMER)

Provides normal operation where both LED strips are activated by either door or by the grounding headlight dimmer switch

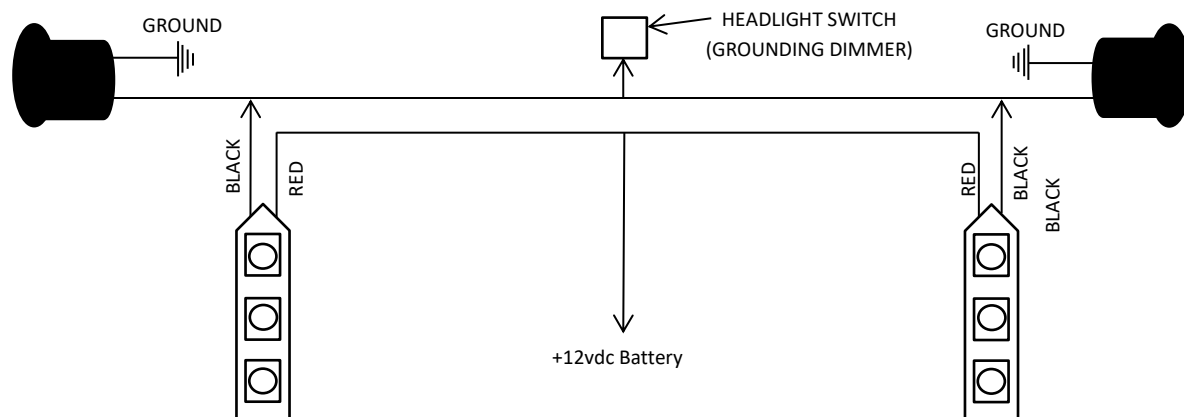

MAGNETIC INTERIOR LIGHT KIT #IL-04

For use in conjunction with a grounding headlight (Dimmer) Switch (Typical late model headlight switch)

Light Kit includes:

- 2 Magnetic Jamb Switches rated at 2 Amps MAX (2 pieces each switch)
- 15' of Wire
- 2 LED Strips, Connectors