


Watson's DRIVE IT !

StreetWorks

4 Bud Way, Ste 3, Nashua NH 03063
 866.859.0513
 Tech@watsons-streetworks.com

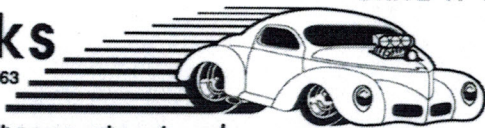

Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car.

Please read and understand all installation instructions before beginning.

Planning and preparation will make the actual installation process easy and quick.

This entire document is copyrighted 2007, StreetWorks LLC.

**Tilt Lever (GM) with
3 Amp ON/OFF Switch**


**#L33
\$46.00**

Tilt Lever with S/S arm & aluminum knob to fit GM 1/4-28 threads has an ON/OFF switch hidden in the nob. Use for ON/OFF switching to 3 Amps max.

To install the tilt lever simply screw it in place into the same threaded hole that the original factory tilt lever occupied. Be Careful not to cross threads and protect the wire from damage. Make sure that the lever is fully threaded, 4 - 5 full turns. **HAND TIGHTEN ONLY.** Should the lever loosen, add a small amount of non-permanent thread lock. After installing the lever, carefully fish the lead wires down through the column and wire.

If greater amperage capacity is needed, a relay is required. See our #L07-40, #L07D-40, #L07-80, etc. depending upon your application. Wire per the relay instructions.

Positive Switching

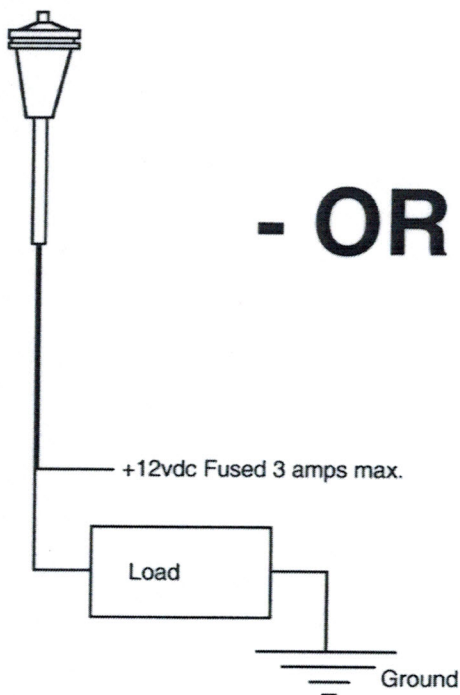

- OR -

Ground Switching

