


Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car. *Please read and understand all installation instructions before beginning*. Planning and preparation will make the entire process easy and quick.

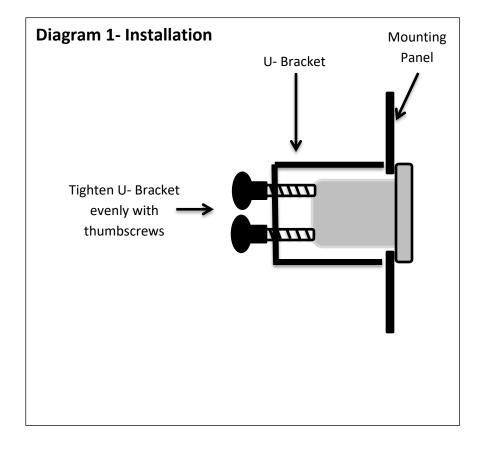

## #IT-USB \$69.00 #IT-USBP \$74.00 Brushed Polished Billet Dual USB Panel Mounted Charger

This charger has two 2.4 Amp charging ports, as well as car voltage display. Easy mounting, even in tight places. Mounts in a 1 1/2 inch hole with a bezel measuring 1 3/4 inches. Battery Voltage is shown with key in Accessory Position and alternator Voltage is shown with Car Running.

## 1. Disconnect POWER at the BATTERY before doing any wiring!

- 2. Determine a good place to mount the unit, and verify there is enough room behind the mounting spot. Roughly 2 1/2 inches deep overall.
- 3. Use a 1 1/2 Inch hole saw to drill a mounting hole. Insert the charger unit and install as shown in **Diagram 1**. Route wires out the side of the U- Bracket.
- 4. Wire into your Accessory circuit as shown in **Diagram2.**
- 5. Reconnect the BATTERY and check operation.

