

Watson's
StreetWorks
4 Bud Way #3 Nashua NH 03063
866.859.0513
www.watsons-streetworks.com


DRIVE IT !


Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car.

Please read and understand all installation instructions before beginning.

Planning and preparation will make the actual installation process easy and quick.

This entire document is copyrighted 2016, StreetWorks LLC.

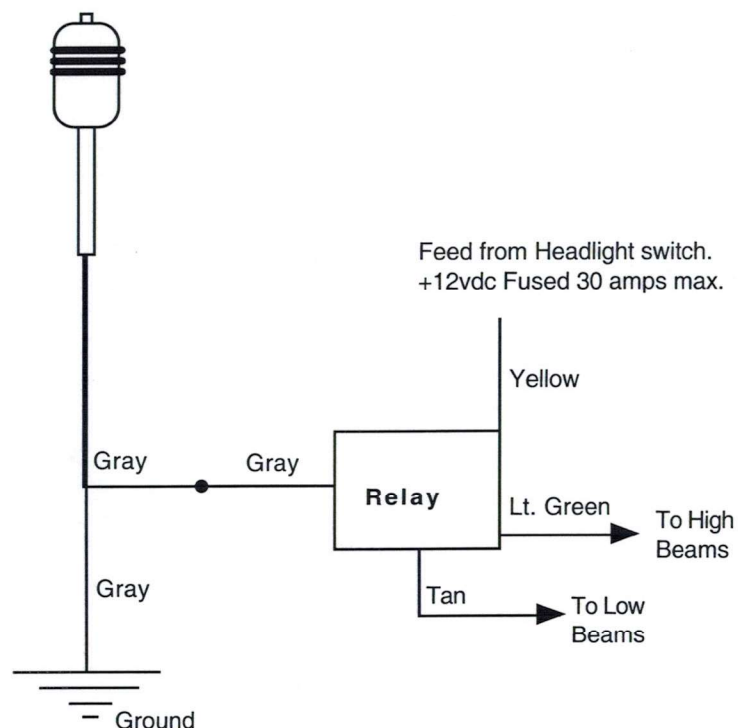

Contemporary Turn Signal Lever (GM) with Switch and Relay for Hi/Lo Dimming

#L43GD

Turn Signal Lever with S/S arm & aluminum knob to fit GM 1/4-28 threads has an ON/OFF switch hidden in the nob and a 40 amp relay for Headlight Hi/Lo dimming. Wire colors match GM color coding and most after market wiring kits.

To install the turn signal lever simply screw it in place into the same hole that the original factory turn lever occupied using the screw provided. After installing the lever, carefully fish the lead wires down through the column and wire.