


Watson's
StreetWorks
 4 Bud Way #3 Nashua NH 03063
866.859.0513
www.watsons-streetworks.com

DRIVE IT !

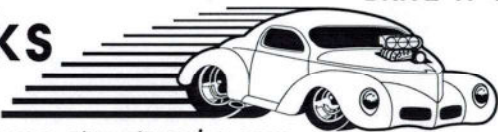

Contemporary Turn Signal Lever (GM) #L43GM
with 3 Amp MOMENTARY Switch

Turn Signal Lever with S/S arm & aluminum knob to fit GM 1/4-28 threads has a MOMENTARY switch hidden in the nob. Use for momentary switching applications or as a replacement for "grounding contact only" switches if you have problems grounding to the steering column (3 Amps max.).

Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car.

Please read and understand all installation instructions before beginning.

Planning and preparation will make the actual installation process easy and quick.

This entire document is copyrighted 2016, StreetWorks LLC.

To install the turn signal lever simply screw it in place into the same hole that the original factory turn lever occupied using the screw provided. After installing the lever, carefully fish the lead wires down through the column and wire.

If greater amperage capacity is needed, a relay is required. See our #L07-40, #L07D-40, #L07-80, #L07-L, etc. depending upon your application. Wire per the relay instructions.

Positive Switching

Ground Switching

- OR -

