


**Watson's
StreetWorks**

4 Bud Way #3 Nashua NH 03063
866.859.0513

www.watsons-streetworks.com

DRIVE IT !

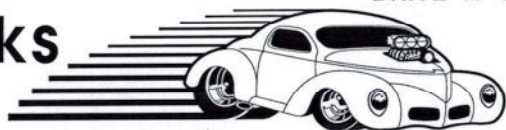

Thank you for buying a StreetWorks product. Be confident that it will provide the quality and performance that you demand for your car.

Please read and understand all installation instructions before beginning.

Planning and preparation will make the actual installation process easy and quick.

This entire document is copyrighted 2016, StreetWorks LLC.


**Contemporary Turn Signal Lever (GM)
with MOMENTARY Switch
and 40 amp Relay**

#L43GMR

Turn Signal Lever with S/S arm & aluminum knob to fit GM 1/4-28 threads has a MOMENTARY switch hidden in the nob. Use for momentary switching applications or as a replacement for "grounding contact only" switches if you have problems grounding to the steering column (40 Amps max.). Great as a horn switch!

To install the turn signal lever simply screw it in place into the same hole that the original factory turn lever occupied using the screw provided. After installing the lever, carefully fish the lead wires down through the column and wire.

Positive Switching

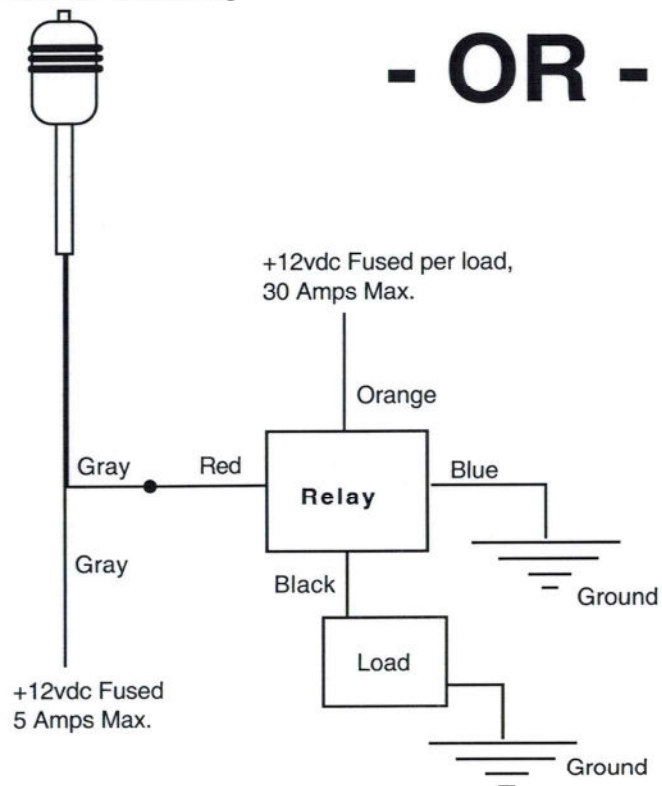

- OR -

Ground Switching

